


# PROGRAMMABLE THERMOSTAT

**Owners Manual**  
**Model : HCPREPRG71**

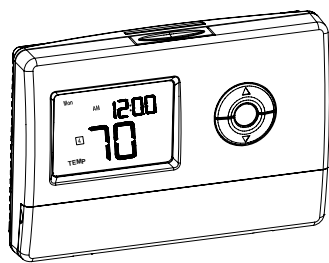

## Congratulations!

Your new thermostat will provide years of reliable service. By saving energy, your thermostat will pay for itself during its first season of use. Thanks you for buying our product!

Please read this manual for complete instructions on installing and operating your thermostat. If you require further assistance, please feel free to contact us

## IMPORTANT INFORMATION

### 1. This thermostat is designed to work on the following systems:

- Gas – Standing Pilot
- Oil – Fired Furnace
- Gas – Electronic Ignition
- Single Stage Heat Pumps – with no auxiliary heat
- Gas – Fired Boilers
- Electric Air Conditioning
- Gas – Millivolt Systems
- Electric Furnace
- Oil – Fired Boilers

This thermostat will NOT control multistage heat pumps or 110/220V baseboard electric heating systems.

### 2. Temperature Range

This thermostat can be programmed between 45°F and 71°F (7°C and 22°C) in heating system. However, it will display room temperatures from 30°F to 99°F (0°C and 37°C). "HI" will be displayed if the temperature is higher than 99°F (37°C), and "LO" will be displayed if the temperature is lower than 30°F (0°C).

This thermostat will automatically cutoff in Heat mode if the temperature rises above 95°F (35°C), and automatically cutoff in Cool mode if the temperature drops below 45°F (7°C).

### 3. Compressor Protection

This thermostat provides a 4 minutes delay after shutting off the cooling system before it can be restarted. This feature will prevent damage to your compressor caused by rapid cycling. It does not prevent a rapid compressor restart due to short power outages.

### 4. Battery Warning

Two fresh AA alkaline batteries should provide well about one year of service. However, when the batteries become drained, the Low Battery Indicator will flash on the display. When this message occurs, install new alkaline batteries. You have approximately 1 minute to change the batteries and keep the thermostat's clock and program settings. Once the batteries have become too low to ensure proper operation, your system will be turned off, and the display will be cleared except for flashing Low Battery Indicator on the LCD display.

**CAUTION:** When only the Low Battery icon flashes on the display, the thermostat is shut down, and your system will no longer operate. In this condition, there is no temperature control of your dwelling.

**NOTE:** The backlight will not function when the thermostat is in low battery condition.


**NOTE:** If you plan to be away from the premises over 30 days, we recommend that you replace the old batteries with new alkaline batteries prior to leaving.

### 5. Power supply

The thermostat shall be powered by 24 VAC and with batteries as backup.

## FEATURES

Structure of thermostat and explanation for the keypads

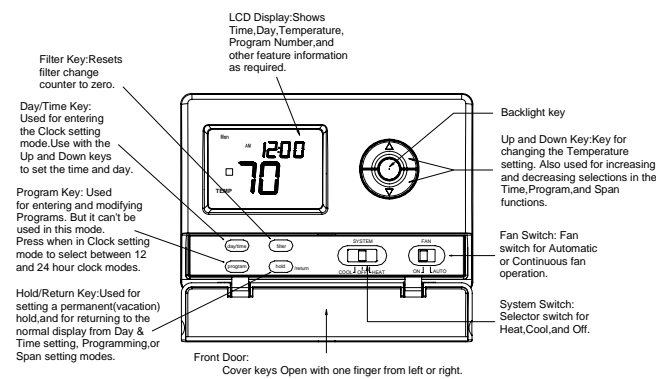

## OPERATION

### Setting Day and Time

- The LCD will show this information when batteries are first installed. The temperature will update after a few seconds.
- During time and day setting mode, the temperature and program displays will go blank.
- Examples: Set the Thermostat to the current time of 2:16 pm on Saturday. Refer to the Steps below.

#### STEP 1:

- Press to enter time and day setting mode. The current hour and the AM/PM indicator will be flashing.
- Press up or down to change the Hour up or down to the current hour. Note the AM/PM indicator, as the display will change at 12AM and 12PM.

#### STEP 2:

- Press again to change from hour setting to minute setting. The current minute will be flashing.
- Press up or down to change the Minute up or down to the current minute.

#### STEP 3:

- Press again to change from minute setting to day setting. The current days will be flashing.

- Press up or down to change the Day up or down to the current day.

#### STEP 4:

- Press again to change back to the normal display.



**NOTE:** You may press **hold** at any time during Day and Time setting to return to the normal display.

### 12Hr. / 24 Hr. Time Format

Your thermostat is set from the factory in normal 12 (AM/PM) time format. To change to 24 hour (military) time, press **program** during time and day setting mode to toggle between the 12 hour and 24 hour formats. The AM / PM indicator will not be displayed in 24 hour mode. Both the current time and all programs will automatically change to the selected format.

## PROGRAMMING

The following time and temperature settings are pre-programmed into the thermostat:

Program Number	Time	Temperature in °F (°C)
1	6:00 am	70°F (21°C)
2	9:00 am	65°F (18°C)
3	5:00 pm	70°F (21°C)
4	10:00 pm	65°F (18°C)

- All 7 days of the week have the same default programs.

### System selector Switch

The System Selector switch on the front of the thermostat determines the operating mode of the thermostat. You may select COOL, OFF, HEAT.



**NOTE:** Anytime you install or remove the thermostat from the wall plate, slide the System Selector to the OFF position to prevent the possibility of a rapid system On-Off.

### Fan switch

The Fan switch should normally be located in the AUTO position. The Fan will be turned on along with normal operation of your system. In a normal gas or oil furnace, the Fan will be turned on by your furnace after its warm-up delay. For electric heat, air conditioning, and heat pump operation, the Fan will turn on with the system. To run the Fan on continuously, slide the Fan switch to the ON position.



### Temporary Manual Override

To temporarily change the current set temperature without affecting your program:

- Press to change to your desired Set Temperature. Hold the key for 2 seconds to fast-advance the Set Temperature.
- Press **hold** to return to normal mode, or wait 5 seconds for it to return automatically.
- The current program number will flash to signify the Temporary Override.
- At the next program change time, the Temporary Override is cancelled, and the next program temperature becomes the setpoint temperature.
- Press to confirm the Temporary Override.

**NOTE:** The Mode of Temporary Manual Override is only valid for in the heating mode

### Filter Change Indicator

Your thermostat also keeps a record of the number of hours your filter has been in use. To Maximize your system's performance and energy efficiency, change or clean your filter regularly.

When the total system runtime for heat and cool reaches 400 hours, "FILT" will alternate with the current time on the LCD display to remind you need clean or change your system's filter. "Filt" will continue to flash until the counter is set back to zero.

• Press to review total filter usage. The display will blink "FILT", then show the Filter Monitor counter. After 15 seconds, the display will return to normal mode. In this example, the counter is at 410 Hours, 26Minutes.

• To reset the Filter Monitor counter, depress Filter key for 3 seconds. the display will blink, and the counter will be reset to zero.

### SPAN Setting

Your thermostat is set at the factory to cycle at 1°F (0.5°C) above and below the set temperature. (Span = 1) This setting has been designed to provide a comfortable room temperature under most all conditions. However, if you find your system cycling too fast or too slow, then the Span can be adjusted to modify the cycle time.

- Press and hold BOTH (up and down keys) for three seconds. The display will flash, and SPAN will be displayed on the LCD.
- Press to raise the Span to 3. This setting INCREASES to cycle time by allowing your system to run LONGER.
- Press to lower the Span to 1. This setting DECREASES the cycle time by causing your system to run SHORTER.

The Span settings remain the same for both HEAT and COOL. The Span can be changed at any time, and is independent of program times or temperatures.

### Backlighting

Your thermostat has an electroluminescent lamp that backlights the display for easy viewing in the dark.

When any key is pressed, the display is illuminated. The display will remain illuminated for 8 seconds after the last key is pressed. This allows the light to stay on if you need to operate several keys.

**NOTE:** If the thermostat is in Low Battery warning condition, the backlight will not operate. Replace with 2 new AA alkaline batteries to restore the Backlight function.

### Low Battery Warning

our thermostat has a two-stage low battery warning system. When the batteries are first detected to be weak, the first stage low battery warning is indicated by "BATT" flashing on the LCD display. At your earliest convenience, you need to replace the batteries with 2 new AA alkaline batteries.

When the batteries become too weak for normal operation, the thermostat enters the second stage low

battery warning which shuts down the thermostat. In this condition, "BATT" flashes alone on the display, and the thermostat will turn your system off. Your system will remain shut-off until the batteries are replaced.

**Note:** The thermostat will still keep the current Set Temperature and Filter run time in memory until new batteries are installed. After confirming that new batteries have been inserted, the thermostat will return to normal operation.

### Auto Recovery

Auto Recovery calculates how early to turn you system back on, so that the room temperature is already comfortable by the start of the comfort temperature program period. Auto Recovery work's in both Heat and Cool modes.

• When the thermostat is in Auto Recovery mode, the display will alternate "RECO" with time, and the program indicator will flash.

• Auto Recovery can be disabled by sliding the Recovery switch on the circuit board to disable.

• Auto Recovery will not operate if Permanent hold or Temporary hold is in operation.

• Auto Recovery can be canceled manually if Hold/RETURN is pressed during the recovery process.

• Auto Recovery will be canceled and change to next period.

### Error Mode

If the thermostat is unable to control your system due to an unexpected battery problem, the thermostat will enter Error Mode. In this condition, the thermostat flashes "E1" or "E2" on the LCD display, and shuts off your system. To correct this problem, replace the batteries with 2 new AA alkaline batteries, even if you have recently replaced them. Move the battery out hold any key then place the battery again. You will need to reprogram your thermostat and confirm normal operation.

If Error Mode returns, please call us for further information.

Lcd	information	Lcd display	information
E1	Sensor Error	E2	System switch

### Auto Cut Off

Your thermostat will automatically cutoff in Heat mode if the room temperature rises above 95°F (35°C). It will cutoff in Cool mode if the room temperature drops below 45°F (7°C).

**Note:** that if your system has malfunctioned and no longer responds to thermostat controls, the Auto Cut-Off will have no effect.

## TROUBLESHOOTING

Problem	Solution
No Display	1. Check battery connections and batteries. 2. Move the battery out and wait for about 1 minute
Entire Display Dims.	1. Replace Batteries.
Auto Fan Does Not Turn On Properly.	1. Move HG/HE selector to correct position.
Heating or Cooling Does Not Go On or Off.	1. Check that the function switch is in the correct position ("HEAT" or "COOL"). 2. There may be as much as 4-minute delay before the system turns On – wait and check. (Compressor protection delay.) 3. Check your circuit breakers and switches to ensure there is power to the system. 4. Replace batteries. 5. Make sure your furnace blower door is closed properly. 6. If your non-heat pump system only uses 4-wires, be sure the jumper wire is installed between the Rh/B and Rc /O terminals.
Erratic Display	1. Move the battery out hold any key then place the battery again. Then reprogram.
If unit continues to operate in the Off position.	1. Replace unit.
Thermostat permanently reads "HI", "LO", or "E1", "E2" ..	1. Replace unit.

### Selector Switches

In order for this thermostat to control your system, the system type must be specified by the selector switches on the printed circuit board inside the thermostat. There is also a selector switch for your choice of Fahrenheit or Celsius temperature display.

- °F / °C selector (Fahrenheit / Celsius)

Your thermostat is set for °F mode from the factory. In order to change to °C mode, slide the switch to °C and Move the battery out and wait for about 1 minute then place the batteries ..

**NOTE:** Unless press any key about 2 seconds without the battery, then place the battery again. the thermostat will not change temperature mode.

All programs and settings will be lost.

**Heating System Selector (HG – HE switch)**

The factory position for this switch is in the "HG" position. Leave in this position if you have a gas furnace or an oil burner. If you have an electric furnace, test to see whether the Heat and Fan come on as expected after installation. If the Fan operation is normal, leave it in the "HG" position. If the Fan does not come on within a minute of the thermostat calling for heating, change the switch position to "HE". The system selector has no effect in the cooling mode.


**NOTE:** "HG" position is for gas and most other systems. "HE" position is for certain electric systems having a fan relay.

**System Selector (STANDARD – HEAT PUMP switch)**

The factory position for this switch is in the STD position. Leave it in this position if you have ANY system that uses gas, oil, electric, or hot water heating. If you have a single-stage Heat Pump (no auxiliary or emergency heat source), then slide the switch to the HP position. Be sure the reversing valve wire is connected to the correct terminal for your heat pump (Y/O) or (W/B).

**Auto Recovery selector (DISABLE/ENABLE)**

Your thermostat is set from the factory with the Auto Recovery Feature enabled, which complies with the EPA ENERGY STAR Program. If you prefer to use normal recovery, slide the switch to the DISABLE position.

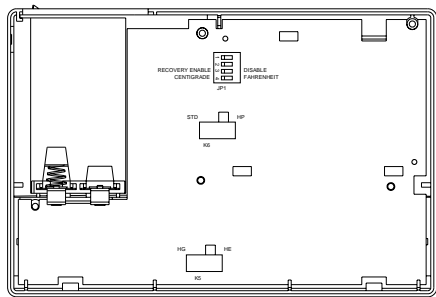

**INSTALLATION**

**What You Need**

This thermostat includes two #8 slotted screws and two wall anchors for mounting. To install your thermostat, you should have the following tools and materials.

- Slotted Screwdriver(s)
- Small Philips screwdriver
- Hammer..
- Electric drill and 3/16" bit
- Two 1.5V (AA) size alkaline batteries (included)

**Remove Old Thermostat**

**CAUTION:** Do not remove any wiring from existing thermostat before reading the instructions carefully. Wires must be labeled prior to removal.

**IMPORTANT!** Turn off the power to the furnace at the main power panel or at the furnace.

Remove existing thermostat cover and thermostat. See Figure 1. Some thermostats will have screws or other locking devices that must first be removed. Once the wall mounting plate is exposed, look for wires. If wires are not visible, they may be connected to the back of the wall plate. Again, look for screws, tabs, etc. Some models have doors that open to expose wires and mounting screws. See Figure 1.

**Typical Home Thermostats**

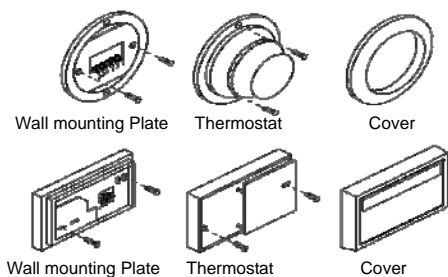


Figure 1


**Wiring Labeling**

Each wire coming from the wall to the existing thermostat is connected to terminal point on that thermostat. Each of these terminal points is usually marked with a code letter as shown in Table A below.

Note that this thermostat has multiple function terminals that allow Single-Stage Heat Pump capability. Standard systems use: Rh, Rc, G, Y, W. [Single-Stage Heat Pumps use: R, Y, G, and O or B.] Table A below shows the multiple functions of the terminals. Use the terminals that match your system.

The number of wires in your system can be as few as two (for heat only systems), as many as eight, or any number in between. If you follow the labeling procedures correctly, you do not have to be concerned about how many wires there are.

There is often no terminal marking on the existing thermostat of two wire, heat only systems. Just connect either of the wires to the RH terminal, then connect the other wire to the W terminal to complete the circuit.

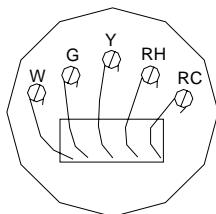

**IMPORTANT! BEFORE DISCONNECTING ANY WIRES, APPLY THE SELF-ADHESIVE LABELS PROVIDED TO THE WIRE AS SHOWN IN TABLE A BELOW.** (For example, attach the label marked W to the wire that goes to the W or H terminal on your existing thermostat.) **IGNORE THE COLOR OF THE WIRES** since these do not always comply with the standard.

- After labeling wires, disconnect them from the existing thermostat.
- Remove existing wall plate. To make sure wires do not fall back into wall opening, you may want to tape them to the wall.
- If hole in wall is larger than necessary for wires, seal this hole with

insulating material so that no hot or cold air can enter the back of the thermostat from the wall. This air could cause a false thermostat reading.

Table A		
If the code letter on your existing Thermostat is	then mark the wire with label shown	and connect to thermostat terminal shown
AC24V R	R	R
AC24V C	C	C
RH, VR or 4 24 Volt	RH	RH
RC, VC 24 Volt Cool	RC	RC
G or F Fan	G	G
Y, C or M Air Conditioning Compressor - or - O Reversing Valve operating in Cool mode. (Single Stage Heat Pumps ONLY.)	Y/O	Y/O
W or H Heating - or - B Reversing Valve operating in Heat mode. (Single Stage Heat Pumps ONLY.)	W/B	W/B
Y1 Heat Pump compressor (Single Stage Heat Pumps ONLY.)	Y1	Y1

**Mount Wall plate and Thermostat**

- Remove the wall plate from your thermostat by pressing the release tab on the bottom of the thermostat. See Figure 2.

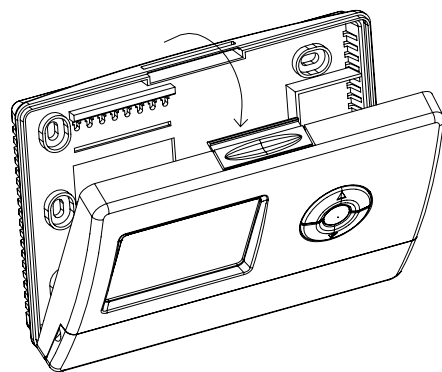


Figure 2.

- Position wallplate on wall and pull existing wires through large opening. Then level for appearance. Mark holes for plastic anchors provided, if your existing holes do not line up with those on the wall plate.
- Drill holes with 3/16" bit and gently tap anchors into the bores until flush with wall.
- Reposition wallplate to wall, pulling wires through large opening. Insert mounting screws provided into wall anchor and tighten. See Figure 3.

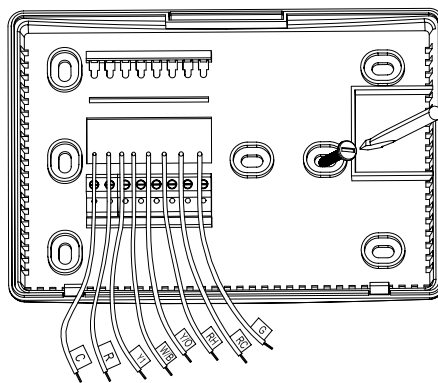


Figure 3.

**NOTE: 5- Wire Systems**

If your thermostat has one wire marked R or Rh (2, 3, or 4-wire system), then leave the jumper wire between the Rh and Rc terminals on the wall plate. Otherwise, if you have separate Rh and Rc wires (5-wire system), then remove the jumper wire between the Rh and Rc terminals.

**Connect Wires and Mount Thermostat to Wallplate**

- Match and connect the labeled wires to the appropriate coded terminal screws on the wallplate. (See Figure 4, 5.) Ignore any wires which may be present, but which were not connected to the old thermostat.
- Refer to the Wiring Diagrams below to be sure your system is wired correctly.
- If your system is a single stage heat pump and uses an O or B wire, you must move the System Selector switch inside the thermostat to the Heat Pump position. If you have a normal furnace or electric system, leave the switch in the Standard position. Refer to the System Selector section on the back for more information on this switch.
- Be sure to tighten the terminal screws securely, otherwise a loose wire could cause operational problems with your system or thermostat.
- Push excess wires back into the hole to prevent interference when installing the thermostat to the wallplate.
- Make sure the System Switch is set to OFF, and the Fan Switch is set to AUTO.
- Insert the bottom tabs on the thermostat body into the slots at the bottom of the wallplate. Press the top of the thermostat body to snap it into the wallplate. Refer to Figure 6.

**NOTE:** Do not force the thermostat onto the wallplate, as the terminal pins may be damaged. If it does not snap properly, the thermostat may not work.

- Insert the two AA size alkaline batteries, observing the polarity marked

inside the battery compartment.

- Switch on the main power at the panel or furnace.

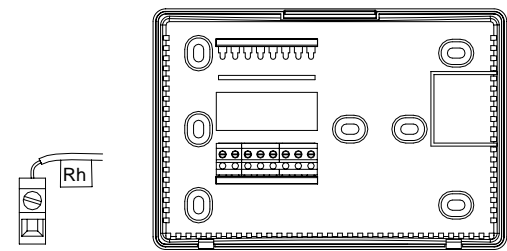


Figure 4

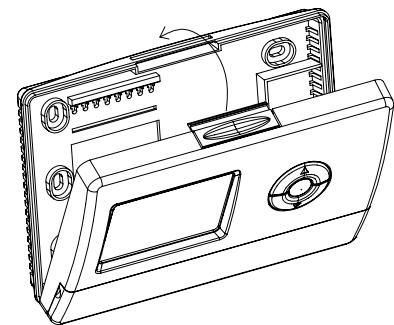


Figure5



Figure6

**Wiring Diagrams**

